


QUICK INSTALLATION GUIDE

OVERVIEW

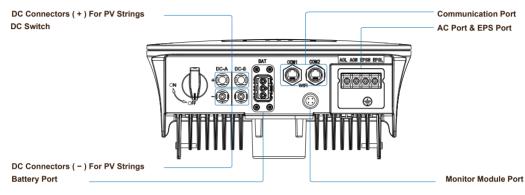



PACKAGE LIST

Please check to make sure the packing and all components are not missing or damaged. Please contact your dealer directly for supports if there is any damage or missing components.





No.	Qty	Items	No.	Qty	Items
1	1	Hybrid Inverter	11	1	Grounding Terminal
2	1	Certificate Of Inspection	12	1	Wall Mounting Bracket
3	1	Quick Installation Instructions	13	1	Battery Connector
4	1	Warranty Card	14	1	Monitor Module
5	1	Monitoring Quick Installation Instructions	15	1/2	DC Connector
6	1	СТ	16	3	Mounting Bracket Screw
7	4	AC Wiring Cover Screw	17	3	Plastic Expansion Tube
8	1	Security Screw	18	1	Smart Meter (Optional)
9	4	AC Wiring Terminal	19	1	AC Waterproof Cover
10	2	Communication Connectors	20	1	RJ45 Connector/ Communication Adapter

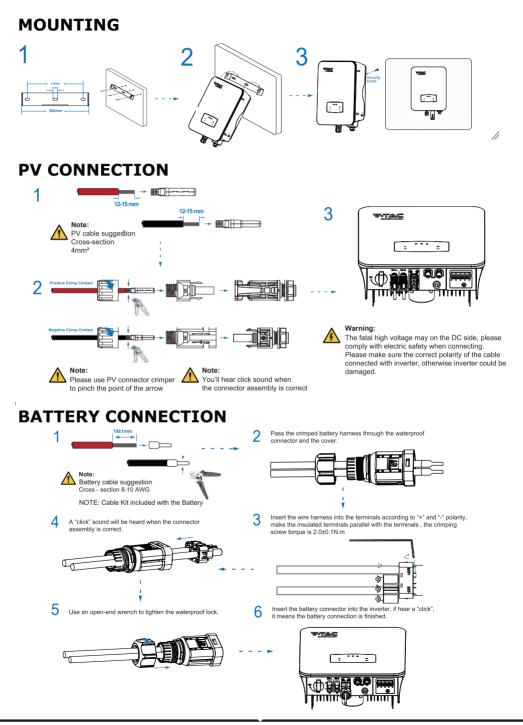

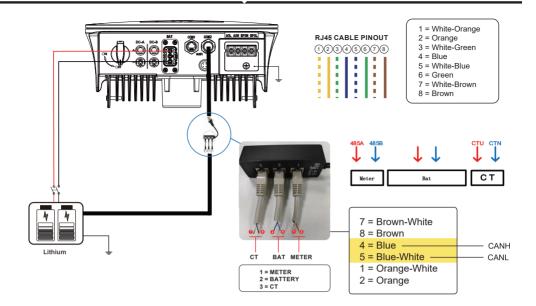


GRID AND EPS CONNETION

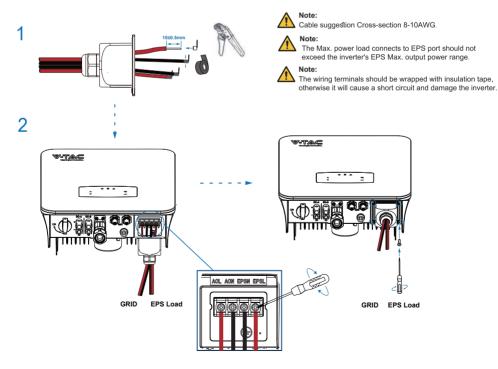


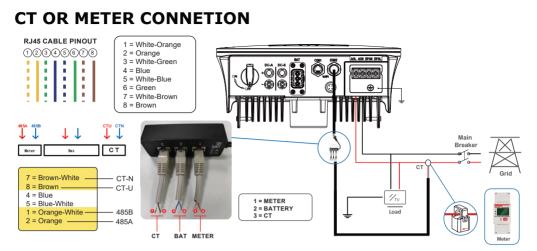

WIFI CONNECTION

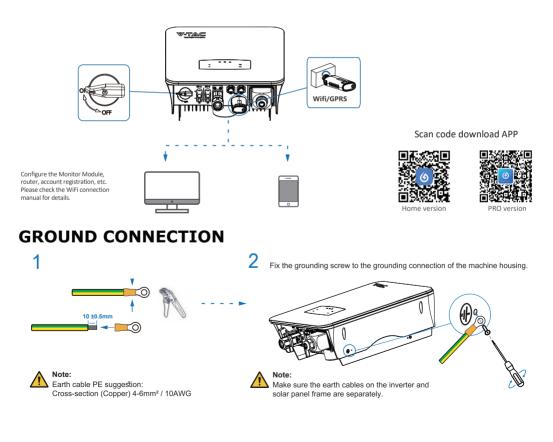


BATTERY COMMISSIONING

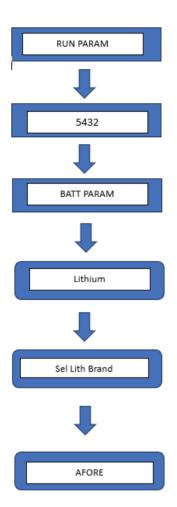

INVERTER TO BATTERY COMMUNICATION

BATTERY SKUs : 11524, 11525

NOTE: Cable Kit included with the Battery

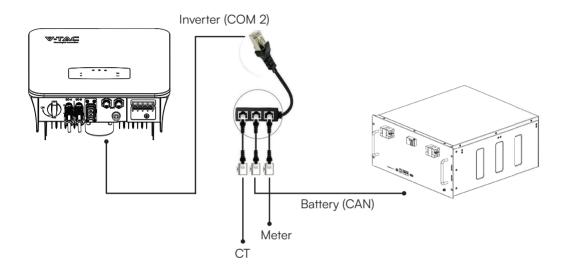

PIN CONFIGURATION

INVERTER : PIN Configuration (COM 2)

No.	СОМ1	COM2
1	NTC+	Meter 485A
2	NTC-	Meter 485B
3	Dry Contact	BAT 485A
4	Dry Contact	BAT CANH
5	DRM	BAT CANL
6	DRM	BAT 485B
7	485A	CTU
8	485B	CTN


BATTERY : PIN Configuration (CAN)

PIN	Description
1	RS485_B
2	RS485_A
3	CANO-H (communicate with the next battery)
4	CANI-H (communicate with inverter)
5	CANI-L (communicate with inverter)
6	GND_RS485
7	CANO-L (communicate with the next battery)
8	/

INVERTER TO BATTERY COMMUNICATION

BATTERY SKUs : 11377, 11523, 11526

NOTE: Cable Kit included with the Battery

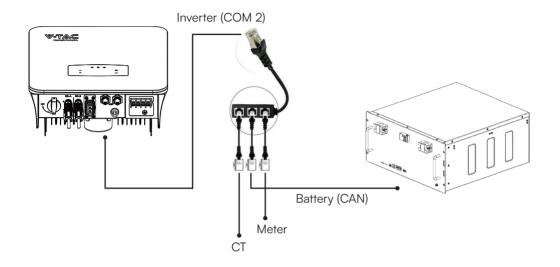

PIN CONFIGURATION

Inverter PIN Configuration (COM 2)

No.	COM1	COM2
1	NTC+	Meter 485A
2	NTC-	Meter 485B
3	Dry Contact	BAT 485A
4	Dry Contact	BAT CANH
5	DRM	BAT CANL
6	DRM	BAT 485B
7	485A	CTU
8	485B	CTN

Battery PIN Configuration (CAN)

PIN	Description
1/2/3	NC
4	RS485_A
5	CAN_L
6	CAN_H
7	RS485_B
8	GND